

## Osram Driver | Osram Gen 4 Chip | Multi Beam angle | High Bay

### Applications

- ◊ Industrial
- ◊ Warehouses
- ◊ Sports Halls
- ◊ Cold Stores
- ◊ Manufacturing
- ◊ Retail stores

### Specification

- ◊ Efficacy (lm/W): 150 - 170
- ◊ Voltage (V AC): 198 - 264
- ◊ Frequency (Hz): 50/60
- ◊ Power Factor >95
- ◊ IP: 20
- ◊ Beam Angles(°) : 15, 30, 40, 120
- ◊ Colour Temperature : 4000k
- ◊ Colour Rendering (Ra) >80
- ◊ Average Life (hrs) : 50000 (L70)
- ◊ Operating Temperature: (°) -25 to + 35

### Options

- ◊ Beam Angles(°): 15, 30, 40, 120 \* Add Suffix 15, 30, 40, 120
- ◊ DALI PIR ( Programmable sensor) \* Add suffix - D I-P
- ◊ PIR ( Programmable sensor) \* Add Suffix P
- ◊ CCT Options Available (please call)



### Ordering information

| Variant Code  | Power (w) | Lumens | mm     |       |       | Weight (Kg) |
|---------------|-----------|--------|--------|-------|-------|-------------|
|               |           |        | Length | Width | Depth |             |
| PEG-70-4-160  | 70        | 11593  | 1220   | 182   | 92    | 5.6         |
| PEG-80-4-160  | 80        | 13250  | 1220   | 182   | 92    | 5.6         |
| PEG-90-4-160  | 90        | 14906  | 1220   | 182   | 92    | 5.6         |
| PEG-100-4-160 | 100       | 16562  | 1220   | 182   | 92    | 5.9         |
| PEG-110-4-160 | 110       | 18218  | 1220   | 182   | 92    | 5.9         |
| PEG-120-4-160 | 120       | 19875  | 1220   | 182   | 92    | 5.9         |
| PEG-130-4-160 | 130       | 21531  | 1220   | 182   | 92    | 5.9         |
| PEG-140-4-160 | 140       | 23187  | 1220   | 182   | 92    | 5.9         |
| PEG-150-4-160 | 150       | 24843  | 1220   | 182   | 232   | 6.7         |
| PEG-160-4-160 | 160       | 26499  | 1220   | 182   | 232   | 6.7         |
| PEG-170-4-160 | 170       | 28156  | 1220   | 182   | 232   | 6.7         |
| PEG-180-4-160 | 180       | 29812  | 1220   | 182   | 232   | 6.7         |
| PEG-190-4-160 | 190       | 31468  | 1220   | 182   | 232   | 6.7         |
| PEG-200-4-160 | 200       | 33124  | 1220   | 182   | 232   | 6.9         |
| PEG-210-4-160 | 210       | 34780  | 1220   | 182   | 232   | 6.9         |
| PEG-220-4-160 | 220       | 36437  | 1220   | 182   | 282   | 7.6         |
| PEG-230-4-160 | 230       | 36437  | 1220   | 182   | 282   | 7.6         |
| PEG-240-4-160 | 240       | 36437  | 1220   | 182   | 282   | 7.6         |
| PEG-250-4-160 | 250       | 36437  | 1220   | 182   | 282   | 7.6         |
| PEG-260-4-160 | 260       | 36437  | 1220   | 182   | 282   | 7.6         |
| PEG-270-4-160 | 270       | 36437  | 1220   | 182   | 282   | 7.6         |
| PEG-280-4-160 | 280       | 36437  | 1220   | 182   | 282   | 7.6         |



8 years for the fitting

5 years for the Sensor

 


# Pegasus Installation Instructions




## Installation Steps

- 1 Isolate Mains Supplies before installation or maintenance
- 2 Strip outer sheath of flex 200mm
- 3 Strip 7mm from the inner cores of the mains cable
- 4 Terminate to 3 pin plug (L) Brown (N) Blue (Earth) Green/Yellow



(C) Either 3 poles, or  
4 poles (emergency).

- 5 Assemble the 3 part plug and tighten the two screws to secure everything
- 6 Using 2 eye bolts provided suspend fitting by suitable means

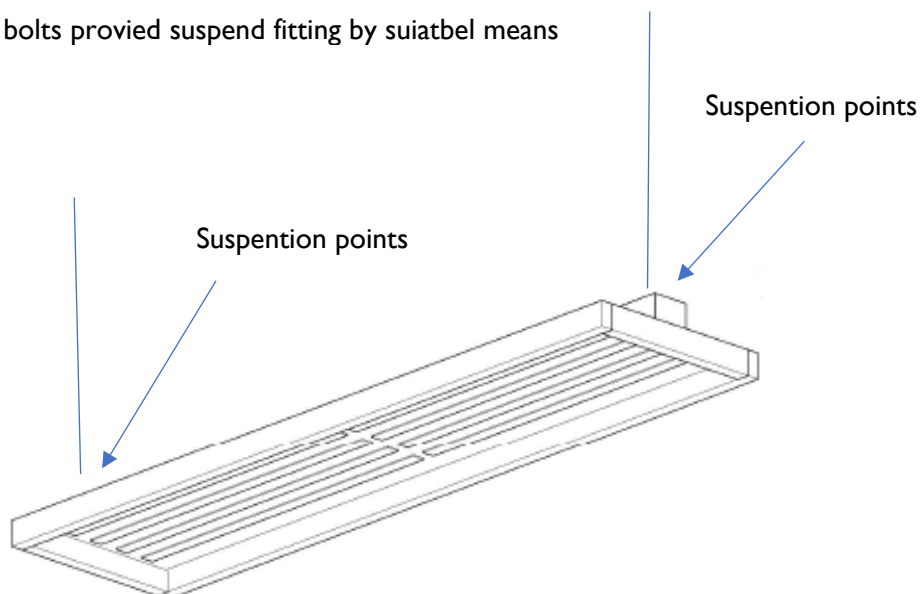

It is recommended that this product is installed by a competent person ensuring the installation complies with the necessary standards. EcoLightingUK Ltd accept no responsibility for injury, damage or loss, which may arise as a result of incorrect installation or maintenance