


Innovation at the right price

User information sheet CS 1740 Series

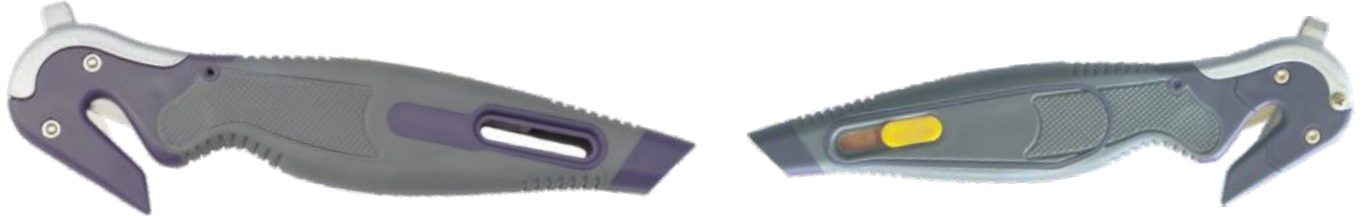

I) Principle use

For cutting straps position the enclosed blade under the strap pulling the knife into the strap such that the strap slides over the blade.	Cutting straps 
For cutting packaging tape pierce the tape with the serrated blade and pull the knife towards you.	Insert serrated blade to cut the tape 
The enclosed blade is also used to cut plastic films. The cutting action can be from side to side or from top to bottom.	Cutting Film 

For greater safety: Discover our accessories

BH01: Cordoflex Belt Holster
Clips to the belt or the belt loops through.



Do not lose your safety knife !


Sharps Bins - Safely dispose of used blades



Innovation at the right price

User information sheet CS 1740 Series

II) Main applications

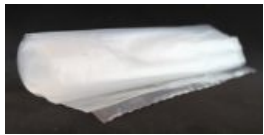 	 	 	 
Stretch film thickness up to 30µm	Films & heat shrink up to 300µmthick	Bubble-wrap 10 to 32mm	Up to 4mm thick foam
 	 	 	 
Straps, plastic foils, composites textiles	Craft & Craft paper double plastic. (CS 1741 & CS 1742 only)	Craft & Craft paper double plastic. (CS 1741 & CS 1742 only)	Single & double corrugated cardboard up to 8mm thick (CS 1741 & CS 1742 only)

III) Operating principle of the additional rear blade (CS1741 & CS1742 only)

Slide the slider to deploy the blade.	During the cut ensure the slider is released (the blade is kept deployed by friction of the material being cut).	Thus when exiting the material (as the slider is not held out) the blade automatically retracts safely.
		

Innovation at the right price

User information sheet CS 1740 Series

IV) Changing the blade

1 Unscrew the screw on the side of the aluminium head	
2 Remove the screw and retain for refitting	
3 Swing open the aluminium head	
4 Remove the two used blades and dispose of them safely	
5 Slide the two new blades into their guide	
6 The blades are in place when they touch the bottom of the guide	
7 Replace the screw and tighten. The knife is now ready to use !	