

Innovation at the right price

User information sheet CS 177



I) Principle use

Slide the slider to deploy the blade.



During the cut ensure the slider is released (the blade is kept deployed by friction of the material being cut).



Thus when exiting the material (as the slider is not held out) the blade automatically retracts safely.



For greater safety: Discover our accessories

BH01: Cordoflex Belt Holster
Clips to the belt or the belt loops through.



Do not lose your safety knife !

Sharps Bins - Safely dispose of used blades



Innovation at the right price

User information sheet CS 177

II) Main applications

 ★★★★	 ★★★★	 ★★★★	 ★★
Corrugated packing...	Simple corrugated cardboard 4mm thick.	Double fluted cardboard up to 8mm thick.	Cardboard Triple grooves up 12/15mm thick
 ★	 ★	 ★★	
Straps, plastic foils composites, textiles .	Stretch film thickness up to 30µm .	Simple cardboard up to 2mm thick.	

III) Changing the blade

1  Unscrew the flat head screw at the top of the metal head	2  Swing open the head and operate the slider to remove the blade	3  Take a new blade from the reserve
4  Position the new blade and close the head	5  Secure the flat head screws at the top of the metal head	6  Your knife is ready to use!